





INSTRUCTION MANUAL

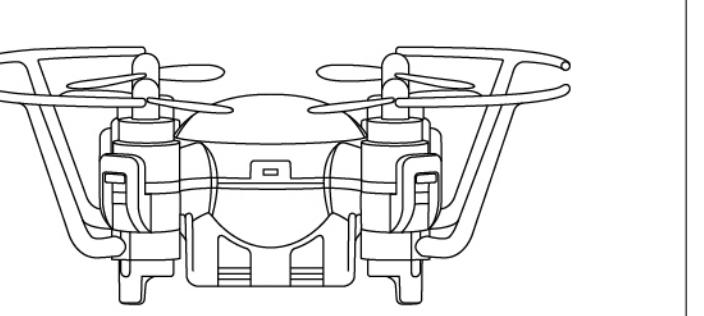

- Headless mode
- One key flip
- One key recover balance mode
- Brand new remote with trimming control mode

6-Axis Gyro System 2.4GHz 6Channel 360° Flips

please read the Instruction Manual carefully before using.
Please keep this manual for further reference.

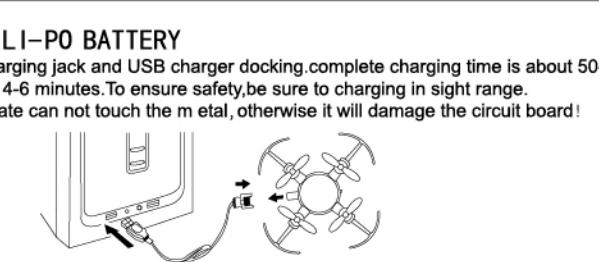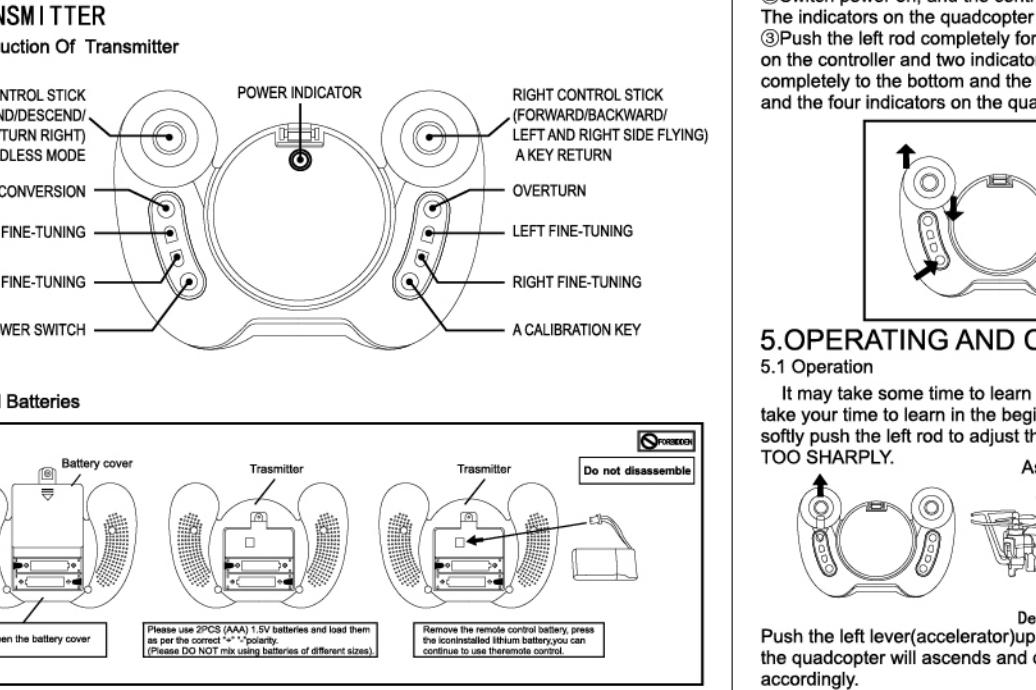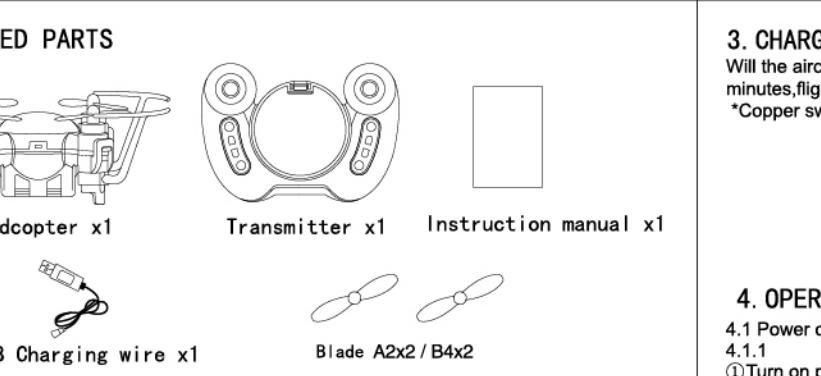

4. OPERATION INSTRUCTIONS

4.1 Power on & Match


① Turn on power switch of the aircraft, (Then aircraft two LED Flicker).

Put the quadcopter on a flat surface.

② Switch power on, and the controller will beep twice and it's the indicators flash.

The indicators on the quadcopter will flash as well.


③ Push the left rod completely forward and controller will beep one time. The indicator on the controller and two indicators on the quadcopter will flash. Pull the left rod completely to the bottom and the controller again beep once. The indicator on the controller and the four indicators on the quadcopter will turn on. The two are now paired.

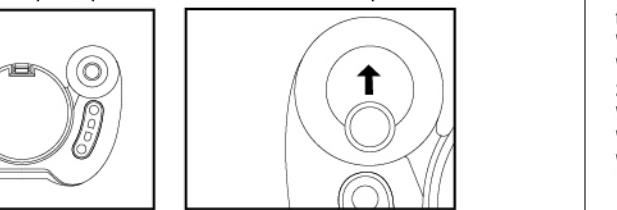

5. OPERATING AND CONTROL

5.1 Operation

It may take some time to learn how to operate this quadcopter. Please take your time to learn in the beginning. If the quadcopter slightly descends, softly push the left rod to adjust the flying height. DON NOT PUSH THE ROD TOO SHARPLY.

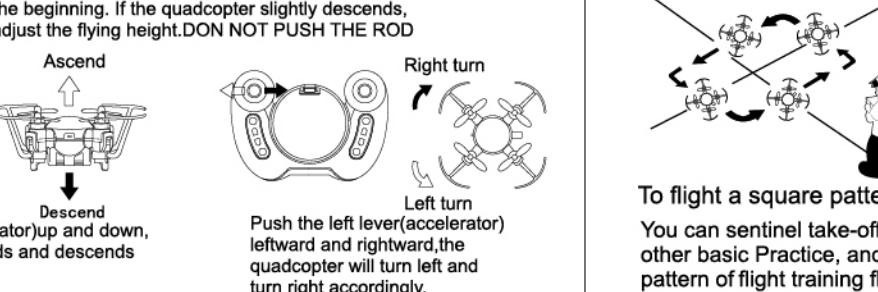

Push the left lever(accelerator) up and down, the quadcopter will ascends and descends accordingly.

Push the left lever(accelerator) leftward and rightward, the quadcopter will turn left and turn right accordingly.