

CADY WILL

INTELLIGENT COMBAT ROBOT WITH MULTI-CONTROL MODES

*Please read the user manual carefully before operation and keep the manual inproper place for future reference.

KNOE YOUR CADY WILL

CADY WILL, the remote control intelligent combat robot, can mimic human actions to walk, slide, turn and dance and sing. It is also programmable and able to replay programmed movements at its own, as well as launch missiles and laser cannon from multiple directions. Players can operate through three control modes-touch mode, gesture mode and remote control mode, creating more fun for users to enjoy.



- (1) Flexible Arm
- (2)Power
- (3) Missile Transmitter (4)Wheels

(5) LED Lights

- (6) Mode Switch Notes:
- (7) Super Laser Cannon Please check the number of accessories carefully (as shown above). Please (8) Gesture Sensor provide proof of purchase and contact the store for replacement if any missing parts.

USB charger x1

Robot x1


(Battery Included)

Remote control x1

Hear manual vi

Accessories

Battery Assembling and Charging

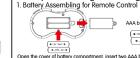


ΔΔΔ hatteries *2 • 1.5V "AAA" • 0 .YYY. /S1 0

Connect with USB interface of

USB charging plug.

Open the cover of battery compartment, insert two AAA batteries (not included).

- Notes: I. Ensure the polarity symbols on the batteries match the symbols inside the
- battery compartment. Do not mix new and old batteries.
- B. Do not mix different types of batteries

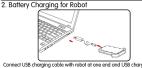

Connect USB charging cable with robot at one end and USB charging interface at the other end.

Connect with USB interface

portable charge Notes -It takes about 120 minutes to charge up to full, and the run time of robot is about 120 to 150 minutes after it is fully charged.

Connect with USB interface of

▲Battery Instructions

- There is a certain risk when using lithium battery. It may cause fire, body injury or property loss. Users must be aware of the risks and take full responsibility of using battery improperly.
- If battery leakage occurs, please avoid contacting your eves or skin with electrolyte. Once it happens please wash your eyes with clean water and seek medical care immediately.
- Please remove the plug immediately if you sense any peculiar smell, noise or smoa.


Battery Charaina

- Please use the charger from original factory to ensure your safe usage.
- Do not charge dilatant or outworn battery.
- Do not over charge battery. Please unplug the charger once fully charged.
- Do not charge the battery next to inflammables, such as carpet, timber floor or wood furniture or on the surface of electro-conductive objects. Please always keep an eye on the battery when charging.
- Do not charge battery which not cool down yet. The charging temperature should be between 0°C to 40°C.

Battery Recycling

 Do not dispose the battery as daily rubbish. Please familiarize yourself with the local garbage disposal method and dispose it according to the special requirement.

KNOW YOUR REMOTE CONTROL

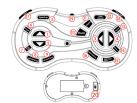

- (1) Forward (1) Auto Display (12) Laser Cannon
- Backward (3) Turn Left
 - (13) Stop/Start (14) Volume +/-
- (4) Turn Right
- ⑤ Speed Up
- 6 Program
- (7) Mode Switch
 - (17) Dance
- (8) Left Hand Up (18) Launch Missile
- Left Hand Down (9) LED Indicator Light
- (10) Music 20 Power Switch

(15) Right Hand Up

(6) Right Hand Down

CONTROL YOUR ROBOT

1 Power

The robot will perform a movement with sound effects when the power switch is on. It will enter sleep mode if not used for a while. If you want to wake up the robot, press "Power" or "Mode Switch" button to restart. When the power is switched on, the power light starts to flash. Turn on the remote control at the same time and the flashing light will turn to constant light when the remote control pairing completes.

2. Stand-by

The robot would speak to you every 20 seconds in Stand-by Mode.

- 1 "Hi, are you there?"
- 2 "Come and join me!"
- 3 "Let's dance together."
- 4 "Oh, it's getting dark."







4. Turn left/Turn right


Turn left

Auto Display

Press "Auto Display", the robot will demonstrate how to move forward, backward, turn around and launch missiles and laser cannon.

6. Launch Missile

- 1) Load the bullets into the place on robot's right arm in the direction of the arrow
- 2 Press the "Launch Missile" button, the robot will lift his right arm, execute shooting action, and put down his arm after shot.

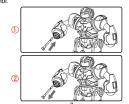

Program

Press "Program" button to design and program movements by commanding the robot to move forward and backward, turn left and right and fire. After it is completed, press "Program" again to replay the programmed movements in turn.

Missile x5

8 Mode Switch

The control mode is set to remote control mode by default. Press the "Mode Switch" button to switch to other control modes of touch mode and aesture mode.

- 1 Remote Control Mode: The remote controller is in state of run. Touch and gesture control is ineffective. Press any button to enter remote control mode.
- 2 Gesture Control Mode: Place your hand close to the gesture sensor of the robot to control it to move forward/ backward and turn left/right with sound effects.







3 Touch Mode: Interact with the robot by touching its head, left arm and right arm and shaking it lightly. Touch its Head Touch robot's head will trigger the reaction as below.

- 1) "Oh, no, please do not touch my head,"
- (2) "That's it. It makes me feel comfortable!" 3 "Relax! Listen to the rhythm of nature."
- Shake its Body Shake robot's body will trigger the reaction as below.
- 1) "Hey, let's fly into Space!"
- 2 "Stop! Please stop. It made me dizzy. To be honest, I went to Mars last night."

Touch Left Arm

Touch the robot's left shoulder to launch super laser cannon. Touch Right Arm

Touch the robot's right shoulder to launch missiles.







9. Speed Up

Press "Speed Up" button to switch from walking mode to sliding mode. Press the direction buttons at the same time to make the robot move quicker accordingly with sound effects. 10. Stop/Start

Press "Stop/Start" button to stop and enter standby mode. Press again to restart.

11. Volume +/ -

There are five levels of volumes (defect volume at 3rd level). Press the button to volume up until full volume and press again to volume down.

12. Dance

Press "Dance" button to trigger the robot to dance.

- 1) "Let's dance." 2 "Ha-ha, competition continues."
- 13. Music

Press "Music" button to play music. 1) "Relax!Listen to the rhythm of nature."

- 2 "Fabulous!"
- 14. Low Battery Attention

When the battery is low, the robot will give you a reminder, "The battery power is getting low since most of the power was used last night for noodles cooking."

10

JJRC TECHNICAL SUPPORT

Dear Customer.

Thank you for choosing JJRC product. Please visit LIRC official website for more FAQ and information if there is any problem of using our product.

-Product Operation: Please visit JJRC College for tutorial video or user manual. -Product Features: Please refer to product page

- description or product brochure. -After-sale Service: Please refer to conditions
- and terms of after-sale service. The final interpretation right belongs to all JJRC.

Should you have any further questions, please visit JJRC Online Feedback and leave your

Thank you again for your support!

message.

JIANJIAN TECHNOLOGY CO.,LTD. www.jjrc-tech.com