 


24

In this operation when the RC boat is shipping in water. Firstly turn the steering rudder unter-clockwise (shown as figure ①), then toggle the throttle joystick forward for 2 to 3 seconds (show as figure (2) and lastly toggle the throttle joystick backward for 2 to 3 seconds (shown as figure (3). Repeat the two and the third steps (shown as figure (2) and (3) until the RC boat starts to filp. Ensure the steering rudder unchanged as figure (1) during the



Notes: When the RC boat is almost out of power, the low when the ke boat is difficult of the ker boat when hearing the alarm otherwise the battery of the RC boat might run alarm otherwise the battery of the RC boat might run out halfway on the return cruise.

This product is not categorized as toys or playthings. It is applicable for users aged 14 and the above. For users under the age of 14, a parent or legal guardian shall company and supervise the child's use of this product at all times.

powered on under ground mode.

Please do not charge batteries, which are not cool down yet.

Ensure no people in the water before shipping the RC boat otherwise it might cause potential accidents. Be aware if there are any plants, objects or obtaction in the water body, since they might be sucked or caught up in the rotating propellers and cause damages to the RC boat.

Please operate the RC boat within a range 150 meters in richeron in rose and control loss.

distance in case of control loss.

This product includes small and liny components, which might cause suffocation if swallowed. Please do not swall any included components.

Please keep distance from the propellers particularly whe

cluded components.

keep distance from the propellers particularly when

they are rotating at high speed to avoid injury.

• Please do not touch the motor in operation or soon after it

Please do not use this product where and when the radio

communication is regulated by the Authority.
Please inspect the USB cable and other componeregularly. If any damages are found, please stop restore or replace with a new one. 26

not in use.

2 Please keep the RC boat in cool place and avoid

1 to reliable to case of paint chipping. Clean the direct sunlight in case of paint chipping. Clean the surface with a piece of soft dry cloth each time after

ove the remote control batteries if the RC boat

will not be used for a certain period of time in case of battery leakage.



Notes:
Each time after use, drain the water in the cabin with a piece of soft dry cloth and place a bag of desiccant inside as to keep it dry.

Thank you for choosing JJRC product. Please visit JJRC

official website for more FAQ and information if there is any problem of using our product.

-Product Operation: Please visit JJRC College for tutorial video or user manual.

-Product Features: Please refer to product page description or product brochure.

-After-sale Service: Please refer to conditions and terms of after-sale service. The final interpretation right belongs to all JJRC.

Should you have any further questions, please visit JJRC Online Feedback and leave your message.

Thank you again for your support!

JIANJIAN TECHNOLOGY CO.,LTD.

28