WIFI FPV
使用说明书

本产品使用WIFI信号传输系统，配备高清摄像头，以安卓系统或IOS系统的智能手机为显示器。摄像头配合手机里安装的相应软件协同工作，从而实现影像的实时回传。其特点是传输速度快，安装方便，无需调试，随装即用，是广大航拍爱好者不可或缺的装备！

安装与使用

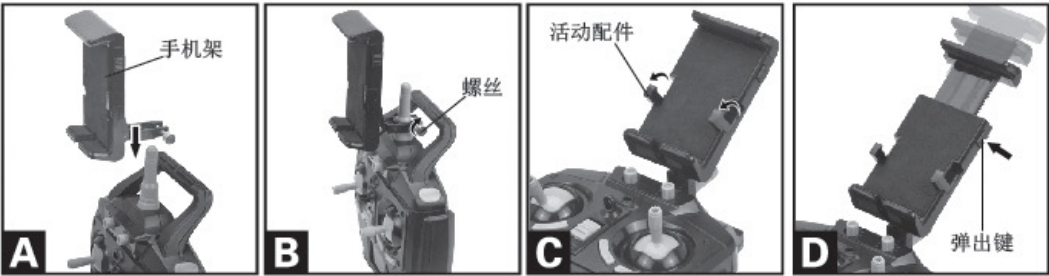1.用手机扫描对应的二维码，下载并安装"HM-UFO"软件，三种不同的二维码如图1。

苹果系统　　国内安卓系统　　国外安卓系统

（图1）

2.打开遥控器和飞行器的电源开关,完成遥控器和飞行器的对码。点击手机"设置"选项，打开WIFI，在列表中找到"CF-UFO-******"的网络，点击连接，直到出现"已连接"表示连接成功，然后退出设置。打开"HM-UFO"进入如图2的界面，点击 ⏻ 进入视频预览界面

帮助说明　　参数设置
点击进入视频预览界面 （图2）

---

① 返回界面　② 拍照
③ 录像　④ 文档（照片/视频）
⑤ 翻转影像　⑥ Wifi信号强度

（图3）

3.遥控器与手机架的安装说明图

手机架　　螺丝　　活动配件　　弹出键
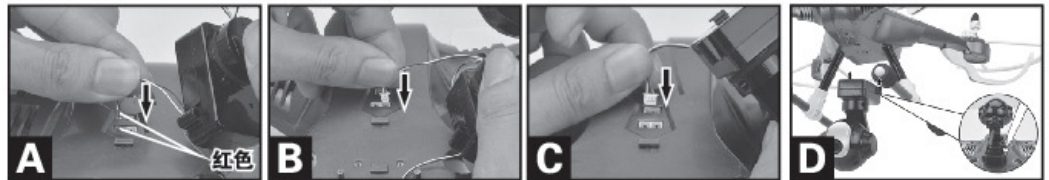
A. 将手机架装在遥控器天线头上。
B. 将手机架上的螺丝锁紧。
C. 如果出现手机跟手机架不匹配时，可拨动左右两边的活动配件。
D. 按弹出键可以匹配不同尺寸的手机或小型平板电脑。

4.当摄像头正常工作时，点击图传界面的"拍照"或"录像"图标，即可拍照或录像，停止录像时，务必再次点击"录像"图标。点击"回放"图标便可在文件夹内查看照片和视频。

红色

A. 先将飞行器反放过来，在用高清摄像头上的红色插头对准飞行器底部红色接头进行对接。
B. 将高清摄像头上的白色且带有两条电线的插头对右边的白色接头进行对接。
C. 将高清摄像头上的白色且带有三条电线的插头对准上面的白色接头进行对接。
D. 将高清摄像头扣紧在飞行器底部后，在锁上螺丝。

WIFI FPV
INSTRUCTION FOR USE

This product adopts wifi signal transmission system and HD camera, smart phones with Android or IOS system are adaptable to be its display screen. With the corresponding APP installed in the smart phone, images can be transmitted from the camera in real time. This product, with high transmission speed, convenient installation process, no debugging and plug and play, is a perfect equipment for aerial photographying amateurs.
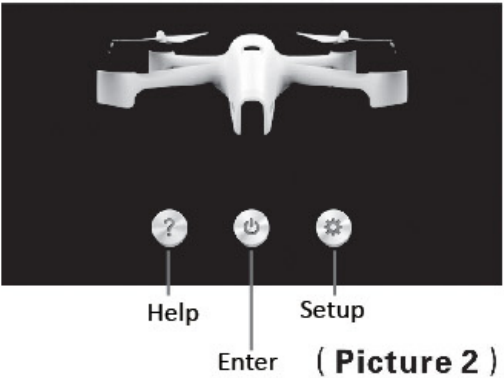
INSTALLATION AND USE

1. Scan the following relevant two-dimension code with your smart phone, download and install the "HM-UFO" APP. Three different types of code are as the picture 1
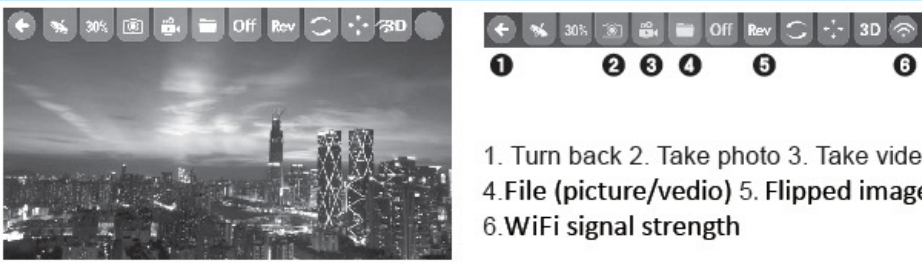
IOS　　CHINESE ANDROID　　INTERNATIONAL ANDROID

（Picture 1）

2.Enter setup,select WIFI,find out "WiFi " hotspot and connect it please return back to desktop after successfully connected,open the completed download App, enter into the procedure.
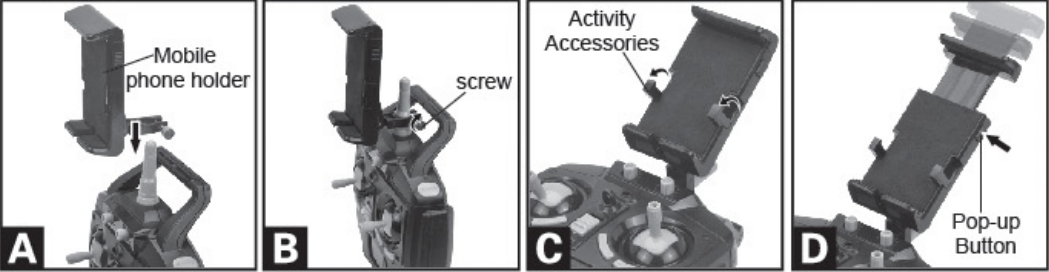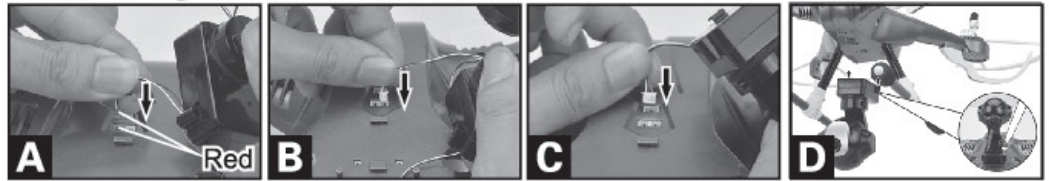
Help　　Setup
Enter （Picture 2）

---

1. Turn back 2. Take photo 3. Take video
4.File (picture/vedio) 5. Flipped image
6.WiFi signal strength

（Picture 3）

3. The installation instruction of chart about the remote controler and phone holder.

Mobile phone holder　　screw　　Activity Accessories　　Pop-up Button

A. Installing the phone holder on the antenna head of remote controler.
B. Lock the screw fastening on the phone holder.
C. When the phone not to match the phone holder, Please adjust the left and right sides of activity accessories.
D. Press the popup can match different sizes of mobile phones or small tablet.

4 .Insert the smart phone's card connector into the corresponding card slot of the remote control. Insert the phone into the card connector, release the screw of the card connector to adjust to a suitable angle, then lock the screw.

Red

A. Turn over the aircraft fist, using the red play on the high-definition camera aim the red at the bottom of aircraft for connecting.
B. USing the white with two wires of play on the high-definition camera aim at the right of white connector for connecting.
C. Using the white with three wires of play on the high-definition camera aim above of white connector for conncecting.
D. After high-definition camera fasten at the botton of aircraft and lock the screw.